

Firmware Updating Procedure for SeaLife DC800 Digital Camera

Legal notice: All SeaLife Digital camera firmware is proprietary software that is copyright protected. It is only intended for authorized use with SeaLife digital cameras. This software may not be used in whole or in part for any other application without the express written consent of Pioneer & Co., Inc.

Download Link for firmware version 1.2.08: <http://www.sealife-cameras.com/assets/firmware/DC800/DS8460M.bin>

Note: The DC800 FW is not available on the SeaLife website. SeaLife Service Centers may email any customer firmware version 1.2.08 on an as needed basis.

Firmware installation instructions

1. Prepare camera.
 - a. Insert a blank SD memory card into camera. All existing pictures on this card will be erased and should be saved before this operation.
 - b. Make sure camera's battery is fully charged before uploading new FW.
 - c. Connect camera to computer with the USB cable.
 - d. Turn camera power on.
 - e. The camera should now be connected to the computer. To confirm, click the 'Start' menu on the computer and select 'My Computer'. You should see a drive named 'Removable Disk (_:)'
2. Save firmware to memory card
 - a. Copy and paste the firmware file 'DS8460M.bin' to the memory card 'Removable Disk (_:)'.
 - b. The firmware should now be saved on your camera's SD memory card. To confirm, click on the drive named 'Removable Disk (_:)'. You should see a file named 'DS8460M.bin'
 - c. Disconnect camera from the computer by turning camera power OFF.
3. Upload new firmware to your camera.
 - a. Keep the SD memory card in the camera
 - b. Push and hold the camera's shutter button while turning the camera power on.
 - c. When the red light on front of the camera starts blinking, release the shutter and power buttons.
 - d. The firmware is now uploading to the camera. This will take about 10 seconds.
 - e. When the red light stops blinking the firmware upload is complete. Turn the camera power off.
4. To upload firmware to more than one camera
 - a. Insert the SD memory card into other camera(s) and repeat step 3.
5. To delete the FW from the card.
 - a. Insert SD memory card into camera
 - b. Switch the camera to the playback mode (the slide switch is located on top of the camera)
 - c. Turn camera power on.
 - d. Push the Menu button and go to the Set-Up tab and select 'FORMAT'
 - e. Caution: Formatting the camera will delete all data on the memory card (images and firmware), so make sure images or other data is removed from card before formatting.
 - f. Select 'execute' to format the SD memory card.
6. Your camera is now updated and ready to use – ENJOY.